


TO RESET THE MCR-1 (EMERGENCY STOP CONTROL CONTACTOR)


#1 DEPRESS THE SOLENDID MONITOR SWITCH ON THE FIRE SUPPRESSION SYSTEM LOCATED PSISM—120. THIS INDICATOR LIGHT WILL COME ON IF THE FIRE SYSTEM IS READY.

#2 VERIFY PB1 IS PULLED OUT (ESTOP ON THE SITEMANAGER)

#3 DEPRESS THE RESET SWITCH ON THE MCR-1 CONTACTOR PANELS. THE CONTACTOR WILL PULL IN.

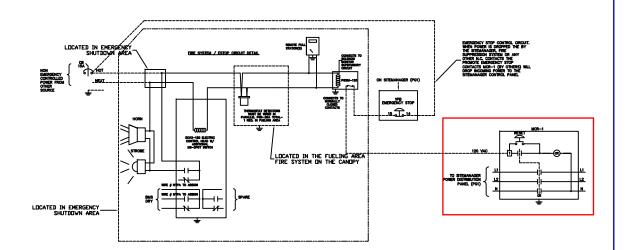

VERIFY THAT THE NEUTRALS FOR THE FIRE SYSTEM AND THE FEED TO THE MCR-1 ORIGINATE FROM THE SAME PANELS. IF NOT THEN THE COIL FROM THE MCR-1 MUST TO THE SAME NUETRAL AS THE FIRE SYSTEM

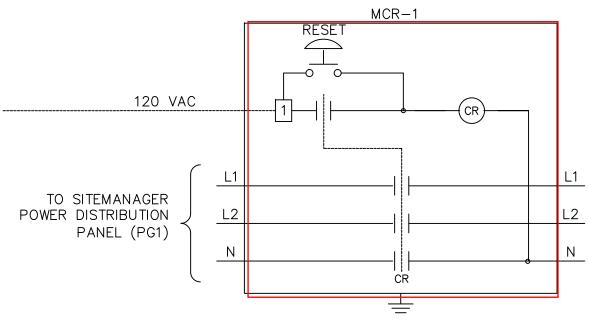

Diffusion of

Lakeside Petroleum Service, Inc.
7677 Villa Maria
N. Syracuse, NY 13212
315-403-9985 ~ www.PetroPanels.com

NYPA POWER DAM MESSENA NY MCR-1 EMERGENCY CONTROL RELAY

DWG. B DWG.P10-0102-E3 SH. 1

OWR._{JLM} Date: 08/12/10